


HUBB Wall Mount Solution - Assembly Instructions



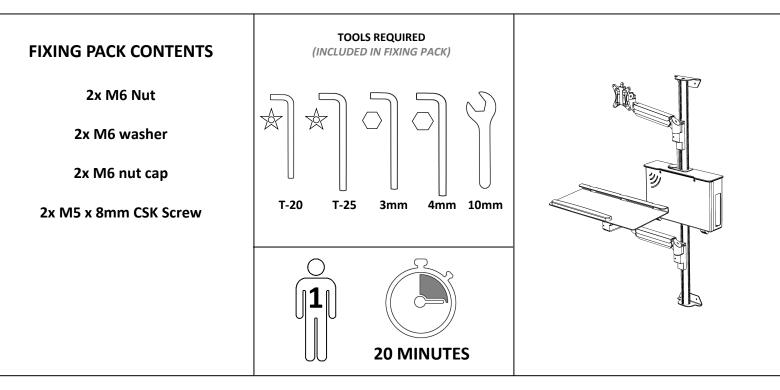

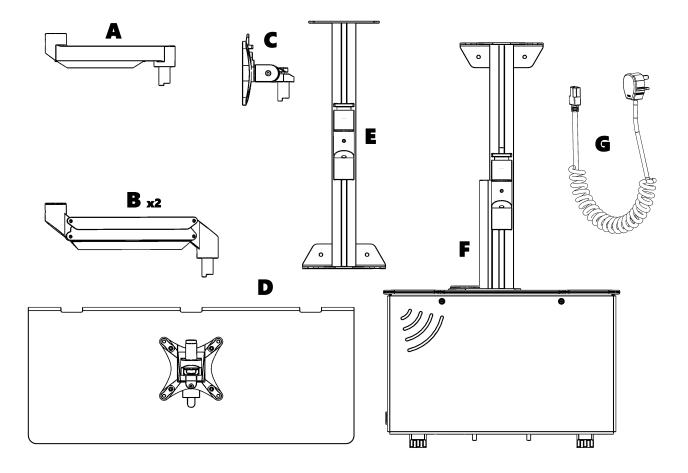




NEED HELP OR ADVICE?

Call our Support Team on 01444 245123 or email support@rdphealth.com

IMPORTANT: Failure to use the correct fixings in the correct place may result in product damage.

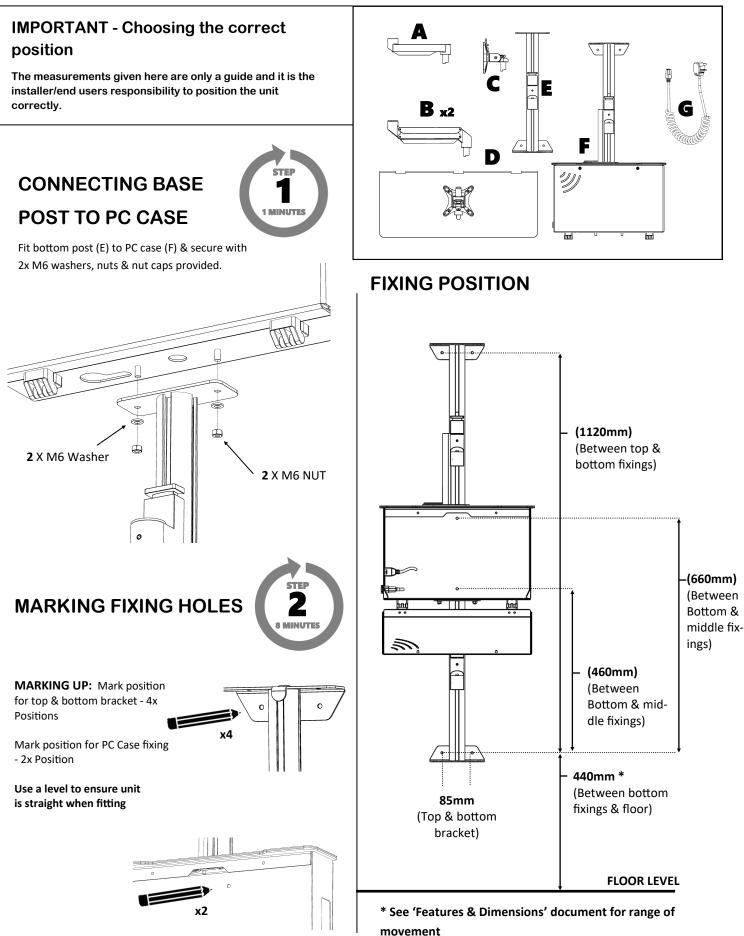




ATTACHING HUBB

Once wall plugs are inserted into all 6 holes, screw in unit.


IMPORTANT - ENSURE SUITABLE FIXINGS ARE USED FOR WALL TYPE

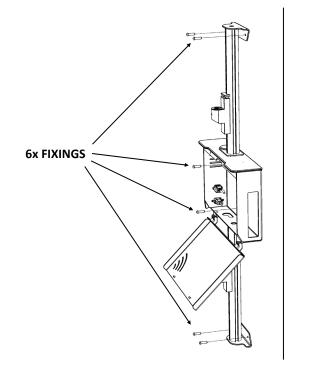



CLOSING PC CASE


Use 2x M5 CSK security screws provided to close PC Case (F).

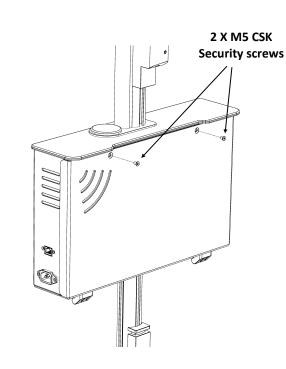




CONNECTING VESA HEAD & ARM

Push vesa head (C) into Dynamic Arm (B) then arm into top connector

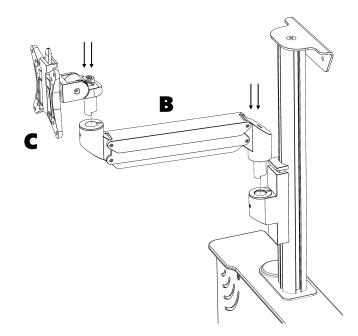


Secure connectors by tightening M4 screws with 3mm hex key provided - DO NOT OVERTIGHTEN

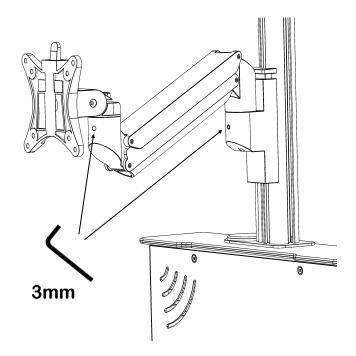




CONNECTING KEYBOARD TRAY & ARMS

Push keyboard tray (D), into arm (A) then into dynamic arm (B) then into bottom connector

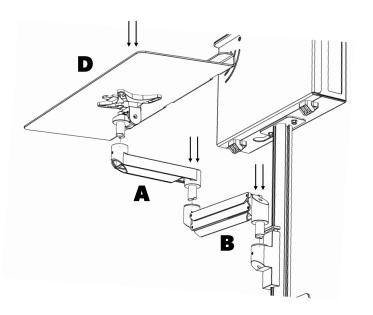


Secure connectors by tightening M4 screws with 3mm hex key provided - DO NOT OVERTIGHTEN

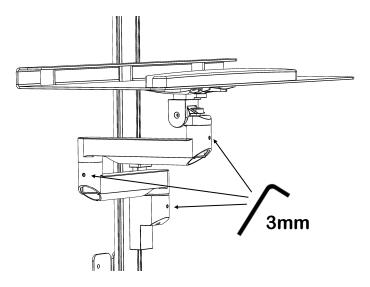



POWER LEAD

Connect power lead into IEC connector at the side of the PC case & plug into wall socket when unit is ready for power

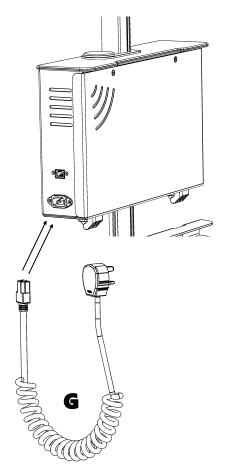

COMPLETE PC FIT

Once HUBB assembly is complete, see O&M Manual for 'PC FIT OPERATIONS'

